

# TeleCorder

## Quick Start-up Guide



Note: You don't need a PC to set up and use your **TeleCorder**. However, if connected to a PC using the supplied USB and/or LAN cables, you will have additional features, a larger display, and better speakers.

- Check the contents of the **TeleCorder** package.
- Keep the master password secure. IMPORTANT: Do not misplace it.
- Connect the **TeleCorder** recorder to your phone lines, handsets, etc.
- Connect the +5v power adapter to the recorder and 110vAC outlet.
- Default recording is audio activated. See the Owner's Manual for instructions to change for phone line voltage sensing and other settings.
- **TeleCorder** recordings are stored on its hard drive. You can use the USB or LAN connections and the software to copy them to a PC.

### KEYPAD BUTTONS PROVIDE THE FOLLOWING FUNCTIONS

-  Increase or decrease the intensity of the LCD backlight
-  Jump down 3 in list of recordings when browsing
-  No function
-  Down 1 when browsing the list of recordings  
Backward when playing or programming
-  View list of recordings, Pause/Start when playing  
Press twice to enter search mode
-  Up 1 when browsing the list of recordings  
Forward when playing or programming
-  View list of recordings
-  Jump up 3 in list of recordings when browsing  
Decrease selected item in set-up and search modes
-  View list of recordings
-  Reset  
Stop playing recordings, return to start-up screen
-  Volume adjustment (four levels) when playing
-  Enter, Start/Stop during playback  
Accept when setting or entering password
-  and  Enter settings mode when not recording  
Enter live-listening mode when recording
-  and  Enter live-listening mode when unit is not recording  
(simultaneously press both keypad buttons)

V2.49

# TeleCorder

## Quick Start-up Guide



Note: You don't need a PC to set up and use your **TeleCorder**. However, if connected to a PC using the supplied USB and/or LAN cables, you will have additional features, a larger display, and better speakers.

- Check the contents of the **TeleCorder** package.
- Keep the master password secure. IMPORTANT: Do not misplace it.
- Connect the **TeleCorder** recorder to your phone lines, handsets, etc.
- Connect the +5v power adapter to the recorder and 110vAC outlet.
- Default recording is audio activated. See the Owner's Manual for instructions to change for phone line voltage sensing and other settings.
- **TeleCorder** recordings are stored on its hard drive. You can use the USB or LAN connections and the software to copy them to a PC.

### KEYPAD BUTTONS PROVIDE THE FOLLOWING FUNCTIONS

-  Increase or decrease the intensity of the LCD backlight
-  Jump down 3 in list of recordings when browsing
-  No function
-  Down 1 when browsing the list of recordings  
Backward when playing or programming
-  View list of recordings, Pause/Start when playing  
Press twice to enter search mode
-  Up 1 when browsing the list of recordings  
Forward when playing or programming
-  View list of recordings
-  Jump up 3 in list of recordings when browsing  
Decrease selected item in set-up and search modes
-  View list of recordings
-  Reset  
Stop playing recordings, return to start-up screen
-  Volume adjustment (four levels) when playing
-  Enter, Start/Stop during playback  
Accept when setting or entering password
-  and  Enter settings mode when not recording  
Enter live-listening mode when recording
-  and  Enter live-listening mode when unit is not recording  
(simultaneously press both keypad buttons)

V2.49